



# BE SEEN!

The wind farms southwest of Travis AFB interfere with the Travis ATC radar at all altitudes.

In the area shown above, if you are not squawking, you cannot be seen on radar!

**Questions? Please call Travis Wing Flight Safety at (707) 424-1115.**